



BMW F800 GS Bashplate


Installation Guide

A qualified, experienced motorcycle technician should install Rockfox products. If you are unsure of your ability to properly install a product, please have the product installed by your local motorcycle dealer. Rockfox takes no responsibility for damages caused by improper installation. All screws, bolts and nuts, including all replacement hardware provided by Rockfox, should be tightened to the torque specified in the OEM maintenance manual for your motorcycle. If no torque specifications are provided in the OEM maintenance manual, the following torques may be used: M6 – 9,6Nm; M8 – 23Nm; M10 – 46Nm. All screws, bolts and nuts should be checked after driving the first 50 km to ensure that all are tightened to the proper torque. Medium strength liquid thread-locker (i.e., "Loctite") should be used to secure all screws bolts and nuts.

Tools required: 13 Spanner
M8 Allen key

Contents: 1 x Bashplate

Step 1

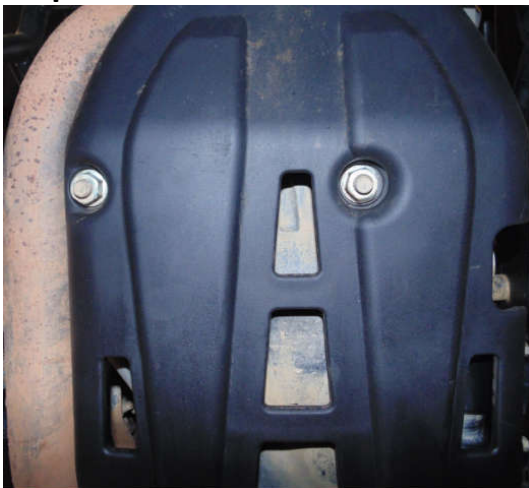

Remove the OEM Bashplate using the 13 spanner

Step 2



Remove the bolt from the bashplate using the M8 allen Key.

Step 3



Fit the Bashplate to the rubbers underneath the engine. Do not tighten them fully yet

Step 4



Insert The front bolt, sliding it through the holes using the M8 Allen Key.

As a precaution go through all bolts and nuts and tighten as needed.

Final product



Please contact us if any problems occur

Regards
The Rockfox Team