



## BMW R1200GS LC

# Headlight Guard Installation Guide

A qualified, experienced motorcycle technician should install Rockfox products. If you are unsure of your ability to properly install a product, please have the product installed by your local motorcycle dealer. Rockfox takes no responsibility for damages caused by improper installation. All screws, bolts and nuts, including all replacement hardware provided by Rockfox, should be tightened to the torque specified in the OEM maintenance manual for your motorcycle. If no torque specifications are provided in the OEM maintenance manual, the following torques may be used: M6 – 9,6Nm; M8 – 23Nm; M10 – 46Nm. All screws, bolts and nuts should be checked after driving the first 50 km to ensure that all are tightened to the proper torque. Medium strength liquid thread-locker (i.e., "Locktite") should be used to secure all screws bolts and nuts.

**Tools required:** T30 Torx Key  
No. 6 Allen Key  
No. 8 Allen Key  
No. 8 Spanner

### Contents

1 Stainless steel Headlight Guard Frame  
2 Stainless steel brackets  
1 Clear Perspex Guard  
1 Orange Perspex Guard  
Assorted Bolts

### Step 1

Remove all plastic coverings from the two headlight guards. (Perspex parts all have a plastic laminate on each side.)



## Step 2

Fix the clear Perspex guard and the orange section to the frame using the three M5 screws supplied, Be careful not to over tighten.



## Step 3

Using the T30 Torx key, remove the two screws that hold the headlight in place.

NB. Beware of the washer




## Step 4

Insert the M6 bolt through the rear of the headlight guard bracket, using the existing washer between the bracket and the headlight.



## Step 5

Attach the frame to the brackets using the M5 bolts supplied. Do one side completely as the guard needs to be pushed inwards for the holes on the opposite side to line up. (This action clamps the brackets onto the headlight so that the guard doesn't move during off road riding.)

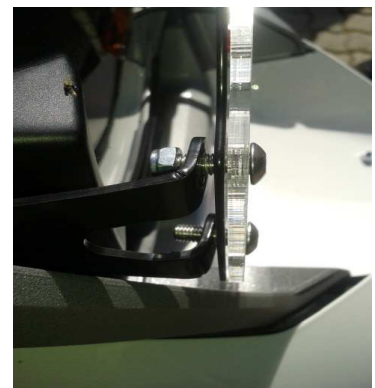

## Final Product

As a precaution go through all bolts and nuts and tighten as needed.



Please contact us if any problem occurs or if the guards are difficult to fit.

Regards  
The Rockfox Team  
072 461 8472