



# BMW R1200 GS LC Pannier Rack

## Installation Guide

A qualified, experienced motorcycle technician should install Rockfox products. If you are unsure of your ability to properly install a product, please have the product installed by your local motorcycle dealer. Rockfox takes no responsibility for damages caused by improper installation. All screws, bolts and nuts, including all replacement hardware provided by Rockfox, should be tightened to the torque specified in the OEM maintenance manual for your motorcycle. If no torque specifications are provided in the OEM maintenance manual, the following torques may be used: M6 – 9,6Nm; M8 – 23Nm; M10 – 46Nm. All screws, bolts and nuts should be checked after driving the first 50 km to ensure that all are tightened to the proper torque. Medium strength liquid thread-locker (i.e., "Locktite") should be used to secure all screws bolts and nuts.

Contents:      1 x Left Side Rack  
                     1 x Right Side Rack  
                     1 x Rear Brace  
                     1 x Bolt Pack

### Left Side

#### Step 1




Remove Seat.

#### Step 2



Remove both bolts from the side of the bike as shown in the picture.

### Step 3

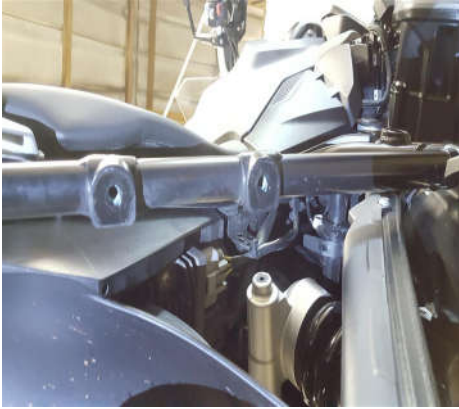


Remove the left hand side pillion footpeg.

### Step 4



Remove The right pillion peg by first removing the exhaust. Behind this cover is as clamp as well as the bolt at the top holding the exhaust in place.

### Step 5

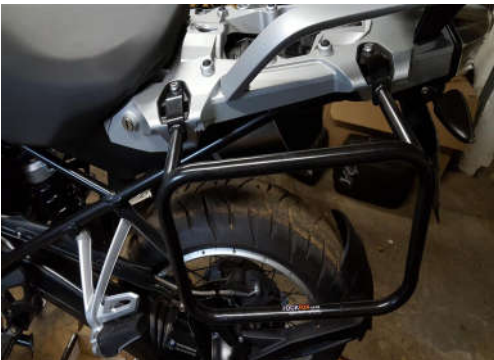

Attach the pannier rack to the bike using the same bolts that were removed.

**Do Not tighten the bolts fully!**

### Step 6



Insert the aluminium spacer on the front of the pillion pegs to accommodate the rack fitting to the rear.

**Repeat Step 5 and 6 for the right hand side. And insert the rear brace using the bolts supplied.**

### **Step7**

**Tighten all bolts and remount the exuahst.**

## **Final product**



Please contact us if you encounter any problems

Regards  
The Rockfox Team