



# KTM 990 Pannier Rack

## Installation Guide


A qualified, experienced motorcycle technician should install Rockfox products. If you are unsure of your ability to properly install a product, please have the product installed by your local motorcycle dealer. Rockfox takes no responsibility for damages caused by improper installation. All screws, bolts and nuts, including all replacement hardware provided by Rockfox, should be tightened to the torque specified in the OEM maintenance manual for your motorcycle. If no torque specifications are provided in the OEM maintenance manual, the following torques may be used: M6 – 9,6Nm; M8 – 23Nm; M10 – 46Nm. All screws, bolts and nuts should be checked after driving the first 50 km to ensure that all are tightened to the proper torque. Medium strength liquid thread-locker (i.e., "Locktite") should be used to secure all screws bolts and nuts.

Tools required: 6mm Allen key  
5mm Allen key  
13mm Spanner

Contents: 1 x Left Side Rack  
1 x Right Side Rack  
1 x Rear Brace

### Left Side

#### Step 1

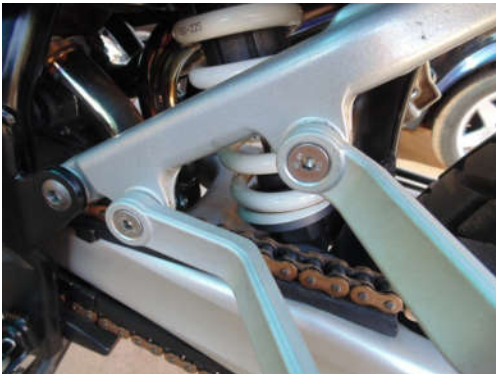

Remove the rear footpeg.

#### Step 2



Remove the two grab handle bolts (In Red).  
Loosen the third bolt to release any stress in the bracket (In Blue).

### Step 3



Attach the pannier rack using the M8x80 to replace the side bolt (PIC1). The M8x70 to replace the top bolt (PIC2). The pillion pegs are fixed using existing bolts (PIC3), be sure to insert the aluminium spacer on the front pillion peg bolt (PIC3).

**Repeat Step 1, 2 and 3 for the Right hand side.**

### Step 4



Attach the rear brace pannier between the two pannier frames, using the supplied M8x20 bolts and nuts.

### Step5

**Tighten all bolts.**

### Final product



Please contact us if you encounter any problems

Regards  
The Rockfox Team