



BMW R1200GS AC Crashbar

Installation Guide

A qualified, experienced motorcycle technician should install Rockfox products. If you are unsure of your ability to properly install a product, please have the product installed by your local motorcycle dealer. Rockfox takes no responsibility for damages caused by improper installation. All screws, bolts and nuts, including all replacement hardware provided by Rockfox, should be tightened to the torque specified in the OEM maintenance manual for your motorcycle. If no torque specifications are provided in the OEM maintenance manual, the following torques may be used: M6 – 9,6Nm; M8 – 23Nm; M10 – 46Nm. All screws, bolts and nuts should be checked after driving the first 50 km to ensure that all are tightened to the proper torque. Medium strength liquid thread-locker (i.e., "Locktite") should be used to secure all screws bolts and nuts.

Tools required: M10 Allen key
M8 Allen key
M6 Allen key
10mm Spanner

Colour and finish may vary from photos.

Step 1



Remove the screw that holds the drain hose on the left. Insert the crossbar making sure it angles downwards and attach with the supplied bolts.

Step 2




Attach the tank protection to the crossbar with the supplied M10 bolts. Do not tighten the bolts fully yet.

Step 3



Attach the top of the tank protector to the steel brace, found underneath the front beak, with the supplied M6 bolts.

Step 4

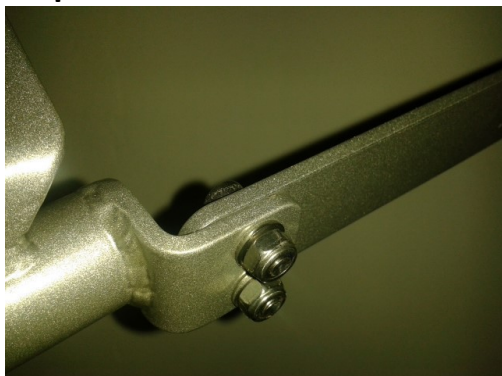

Attach the centre piece onto the tank protection with two supplied M6 bolts either side.

Repeat Steps 2, 3, 4 for the other side. Then tighten all the bolts.

Step 5



Insert the left tappet guard into the frame as shown above using the supplied M10 screws to attach it to the engine. Please see below which spacer is used on which side.

PLEASE NOTE: **Left side 10mm Aluminium spacer.**
 Right side 5mm Aluminium spacer

Repeat Step 5 for the right hand side.

Step 6



Attach the top of the taper guard to the tank protection with the supplied.

As a precaution go through all bolts and nuts and tighten as needed.

Final product



Please contact us if any problem or if the bars are difficult to fit.

Regards
The Rockfox Team